

PRODUCT SUPPORT GUIDE

Adjustable Bed Assembly & Functions



DESIGNS IMPORTED BY
SLEEPPEEZEE LTD
POONESTER

Sleeppeezee

ESTABLISHED 1924

www.sleeppeezee.com

LEAVE THE **REST** TO US

THANK YOU FOR CHOOSING SLEEPEEZEE


Thank you for choosing one of our premium electric adjustable beds. We hope that you will be delighted with your new purchase.

The adjustable bed you will sleep on draws upon 100 years of traditional craftsmanship and manufacturing innovation.

We are proud of our reputation for quality and design and you can be assured that every product we make is produced with care and to the highest standard.

Please take your time to follow these product care guidelines. They are designed to help you get the most from your bed and ensure it functions correctly.

TOOLS YOU WILL NEED before you get started:

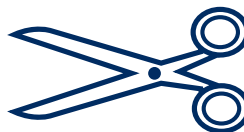

Sharp pointed scissors

Your bed will be delivered with the divan base and mattress being separate. The slats within the frame of the base are already assembled for you and the motors fixed within the frame.

The mains cable is also already fixed to the motor.

STEP 01

Carefully turn the divan base on one side to reveal the underside of the bed.

Remove the castors from their plastic bag using scissors.

On each corner of the bed you will find the location of the legs.

Screw the legs into the holes.

If you have bases to link refer to the Velcro linking pad instructions before installing the legs.



STEP 02

When all four legs have been successfully installed turn the divan base back to its correct position so it is now sitting on its legs.

STEP 03

Remove the transit straps either end of the base.




STEP 04

You are now ready to fit the headboard (where applicable).

Identify the headboard tags at the head end of the divan base.

Behind these tags are threaded holes for the headboard bolts.

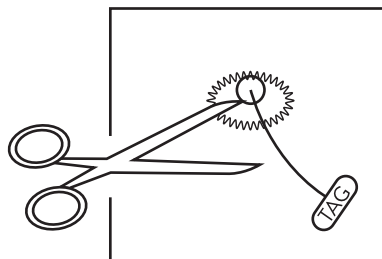


STEP 05

If fitting a down to the ground headboard, take the headboard bolts out and position the spacer blocks over the holes indicated by a tag.

Then screw in the headboard bolts.

If fitting a strutted headboard find the holes which are indicated by a tag and screw in the headboard bolts leaving a sufficient gap to slide the headboard struts down on them.


Fit the headboard by sliding into place.

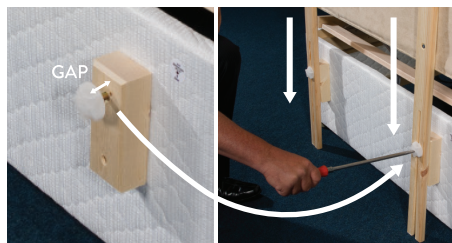

STEP 06

Fit the mattress retaining bar at the foot end of the bed by sliding the bar between the front slat and second slat.

Then draw the bar towards you, hooking it on to the first front slat.

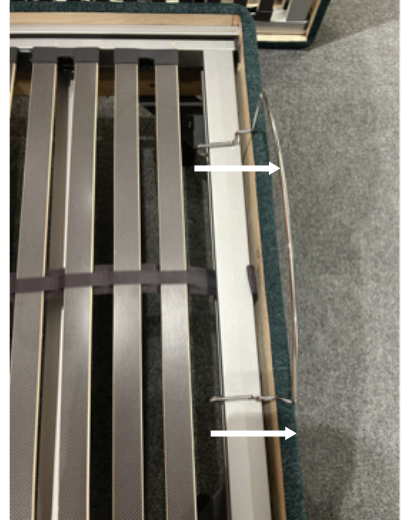


STEP 07

Position your bed where required ensuring that you are close to power supply. Connected to the motor is a two-pin lead, plug this into the power adaptor.

You can then insert the plug into a power socket.

Ensure the power pack is fitted with the batteries provided.

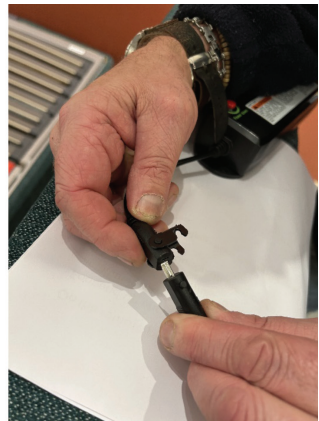

USER WARNINGS:

- The bed should be left in its lowest position when the user is sleeping in order to reduce the risk of injury due to falls
- To avoid unintended movement of the bed please ensure the control pendent is positioned away from the user when sleeping or the motion lock out control is activated
- Avoid accessing the area underneath the mattress between the slats when the bed is in operation as the gap in between the slats decreases due to the bed movement and could trap fingers or limbs. Avoid any person accessing the area underneath the foot and head end of the bed frame mechanism when in upper position.
- The lowering of the bed mechanism by the operator while a person is within these areas could trap the person and cause injury – please keep a safe distance from these areas, when the bed motion is in operation.



IMPORTANT INFORMATION:

- Avoid accessing the area underneath the mattress between the slats when the bed is in operation as the gap in between the slats decreases due to the bed movement and could trap fingers or limbs.

Avoid any person accessing the area underneath the foot and head end of the bed frame mechanism when in upper position.

- The lowering of the bed mechanism by the operator while a person is within these areas could trap the person and cause injury – please keep a safe distance from these areas when the bed motion is in operation.
- Ensure the power pack is fitted with batteries and changed every 6 months. In the event of a power outage, the power pack can be used to lower the lid if open.
- When fitting the headboard ensure no cables are squashed underneath.
- If the remote becomes unpaired, press the ‘head end up’ and ‘head end down’ buttons on the remote simultaneously, the buttons will turn from white to blue. At the same time, you need to press the small reset button on the side of the motor. You will hear a bleep from the motor to say pairing is complete.
- If the remote runs out of charge, the powerpack contains two 9-volt batteries. If the handset is lost with the bed raised, you can lower the bed by pressing and holding the **RED button** on the power supply.

Please note, this is not battery back-up – so the bed will not operate under battery power, rather emergency lowering so the sole design of this is to get the bed flat.



REMOTE CONTROL FUNCTIONS

- ① Both HEAD and FOOT sections UP
- ② Handset torch ON/OFF
- ③ Both HEAD and FOOT sections DOWN
- ④ HEAD section UP
- ⑤ MEMORY set – Hold down button for approx. 10 seconds, backlight flashes and you can save a Memory Position on button 8, 11 and 14.
- ⑥ HEAD section DOWN
- ⑦ FOOT section UP
- ⑧ Memory Position 1 (please set to your own preference):
Press and hold and the bed will run to Memory Position 1. Release the button and the bed will stop moving.
Keep holding until you get to the saved Memory Position.
TO RESET the Memory Position please follow process described in 5.
- ⑨ FOOT section DOWN
- ⑩ HANDSET LOCK – Hold down for around 10 seconds to lock the handset.
Hold on again for 10 seconds and the handset unlocks.
- ⑪ Memory position 2 (please set to your own preference):
Press and hold and the bed will run to Memory Position 1. Release the button and the bed will stop moving. Keep holding until you get to the saved memory position.
TO RESET the Memory Position please follow process described in 5.
- ⑫ Underbed light ON/OFF
- ⑬ HEAD section massage on. Press once to turn on in constant mode. Press three times to increase massage strength three times. Press again to turn off.
Massage motors have a default time of 30 minutes.
- ⑭ Memory position 3 (please set to your own preference):
Press and hold and the bed will run to Memory Position 1. Release the button and the bed will stop moving. Keep holding until you get to the saved Memory Position.
TO RESET the Memory Position please follow process described in 5.
- ⑮ FOOT section massage on. Press once to turn on in constant mode. Press three times to increase massage strength three times. Press again to turn off.
Massage motors have a default time of 30 minutes.
- ⑯ Massage motors ON – MODE switching between constant, pulse and wave.
Press each time to go through programmes
- ⑰ Massage OFF





CONTACT US

- **PHONE**

01634 723557

- **EMAIL**

enquiries@sleeppezee.com

- **ONLINE**

www.sleeppezee.com

- **POST**

Sleeppezee
Knight Road
Rochester
Kent. ME2 2BP

Our dedication to helping preserve our environment and reduce our carbon emissions has resulted in us achieving a Carbon Neutral organisation status.



As part of our carbon offsetting initiative, we work with local schools in a tree planting programme, which allows us to share with young people the importance of sustainability and caring for our environment.

